

5' CEDAR Classic Swing

Model # 87638N

We are sure you will be pleased with this purchase of ready to assemble furniture from Richey Industries. We have packaged and inspected this unit and believe it meets the highest possible quality standards. However, if problems do arise, please contact us at Richey Industries. Thank you. (1-800-888-7946)

A-frame and Canopy Frame with Cover Sold Separately


BILL OF MATERIAL

- A. Seat Assembly
- B. Back Assembly
- C. 2 - Arms
- D. 2 - Arm Supports
- E. Swing Chain - w/S-Hooks

- F. Hardware Package #72
 - 4 - 5/16 -18 x 5-1/4 Eye Bolts
 - 4 - 1/4 x 3-1/4 Round Head Bolts
 - 8 - 5/16 x 2 Round Head Bolts
 - 4 - 5/16 Jam Nuts
 - 12 - 5/16 Nyloc Nuts
 - 4 - 1/4 Nyloc Nuts
 - 24 - 5/16 Washers
 - 8 - 1/4 Washers

ASSEMBLY POINTERS

- A. Carefully read the instructions and acquaint yourself with the wood parts, bolts and screw sizes before starting assembly of your furniture.
- B. Separate the hardware by size before starting assembly.
- C. Washers are to be placed between all bolt heads, nuts and wood surfaces.
- D. During assembly all hardware should be semi-tightened only until the entire unit is assembled and aligned. The hardware can then be fully tightened. Do not over-tighten.
- E. The swing is finished with an oil based stain. After your swing has weathered you may wish to apply a second coat.

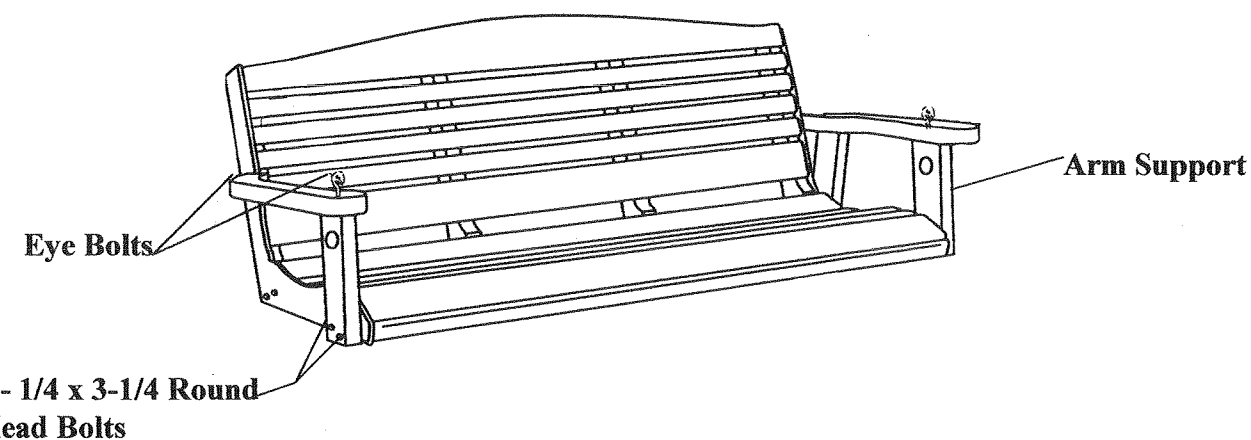

ASSEMBLY STEPS

1. Align the seat and back assemblies by putting the notches together. Bolt the cleats together with the 6 - 5/16 x 2 Round Head Bolts, washers and Nyloc nuts. Semi-tighten.
2. Attach the arm supports to the front of the seat cleats using the 2 - 1/4 x 3-1/4 Round Head Bolts. Semi tighten.
3. Take each eye bolt and screw one of the non-locking 5/16 jam nuts to the end of the threads.
4. Bolt the left and right arms to the arm supports using the 5/16 eye bolts with washers. Insert eye bolt with washer in the hole in the top of the arm and thru the hole in the end of the arm support. Now place a washer and nut on the end of the eye bolt and tighten by turning the eye bolt and holding the nut with an open end wrench.
5. Now attach the arms to the back assembly using the 5/16 eye bolts and washers. Run the eye bolt thru the hole in the rear of the arm and thru the back assembly and secure with washer and Nyloc nut. Turn the open side of the eye bolts toward the bottom of the swing.
6. Tighten all bolts, but do not over-tighten.
7. Attach the Chain—**IMPORTANT:** Attach the shorter leg (23") of the chain (labeled front) to the front eye bolt, and the longer leg (27") of the chain to the rear eye bolt.

The chain provided is for either porch or A-frame hanging. Therefore, when hanging in the A-frame the chains will be too long. If you desire to adjust the height, remove the swing and cut chain to desired length.
8. After the furniture has been exposed to the weather for a period it may be necessary to retighten the bolts.

ASSEMBLY INSTRUCTIONS

For Model # 87638N – 5' CEDAR Classic Swing

TO A VALUED WOODIES CUSTOMER:

 
We are pleased you chose one of our products.

If you have any questions regarding your purchase, we would like to hear from you. Please call 1-800-888-7946, extension 305.

The Great American Woodies™ line is one of unusual quality. Our products are manufactured to exacting standards from Western Red Coastal Cedar.

This product is finished with an oil based stain. It should be refinished periodically and at least once annually depending on the exposure to the elements. See your local retailer for the best finishing materials for your area.


IMPORTANT—During assembly all hardware should be semi-tightened only until the unit is fully assembled and aligned. Only then should the hardware be tightened. Do not over tighten. Bolt holes will not align properly if one or more bolts is tightened before all hardware is installed.



3/16" 1/4" 5/16"



Place end of bolt on black dot to check for correct size

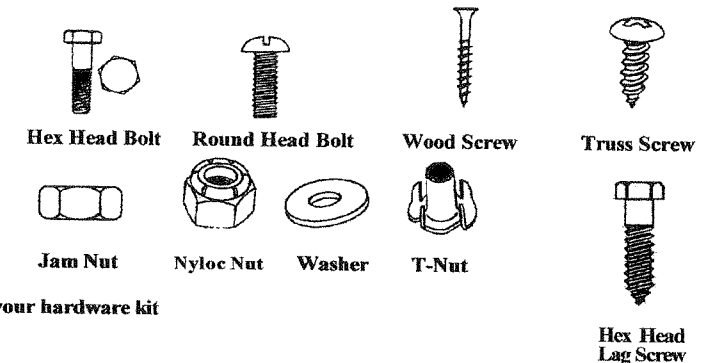

All items above may not be included in your hardware kit
Some kits have excess hardware